

How change the ENG/SK/CZ/ language of the menu VM 7T BM


1. Put the decompressed file DTP70100 for ENG /DTP71400 for SK/ DTP71600 for CZ into SD card, and insert the SD card to VM 7T BM.
2. Set into the main menu and touch "easydoor" logo.



3. Touch the screen with HW data for 3 seconds.



4. Choose System setup icon.

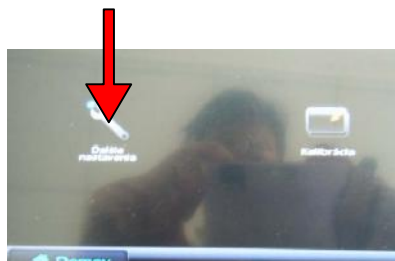



5. You will see a keypad .



6. For EN please input "8101", for SK please input "8114", for CZ please input "8116" and waiting for it work, the monitor will act itself and show "OK" then, and close for a while.
7. Wait for a 5 seconds , and then re-touch the screen, you will see the required language of menu.

How change the ENG/SK/CZ/ language of the menu new VM 35, VM 7T

1. Press into the menu as below (left), and push UNLOCK button for 3 seconds, you will see the menu (right) to show which language you need.

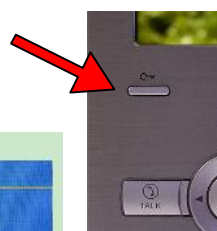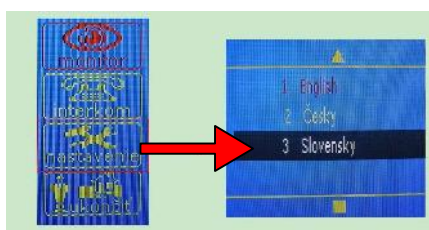

2. Choose it and confirm.